

Installation Instructions

6" MAXXUM – 5-WIRE CONDUIT BUSHING

The following defined terms are used throughout this literature to bring attention to the presence of hazards of various risk levels, or to important information concerning the life of the product.

DANGER

Indicates presence of a hazard which *will* cause *severe* personal injury, death or substantial property damage if ignored.

WARNING

Indicates presence of a hazard which *can* cause *severe* personal injury, death or substantial property damage if ignored.

CAUTION

Indicates presence of a hazard which *will* or *can* cause *minor* personal injury, death or substantial property damage if ignored.

NOTICE

Indicates special instructions on installations, operation, or maintenance which are important but not related to personal injury hazards.

Disable the Pump

DANGER

Always **DISCONNECT** and **LOCK** or **TAG OUT** the power before starting to service the pump.

1. Remove the wiring compartment cover and replace o-ring with new one provided. Lubricate with light grease, oil or petroleum jelly.
2. Disconnect wires between male connector and pigtail.
3. Loosen screws in old conduit bushing and remove.
4. Push wires through new conduit bushing, pull wires taut and seat bushing.
5. Tighten screws hand tight.
6. Reconnect wires.
7. Replace wiring compartment cover, torque 20-50 FT.-LBS.

